



Siedlerweg 39
D-32429 Minden
Tel: +49 571 505220
Fax: +49 571 5052299

sales@zeitcontrol.de

www.basiccard.com
www.zeitcontrol.de
www.transponder.de



USB stick RFID Reader

The reader is connected directly to the PC USB port (plug & play). It uses Windows internal drivers, there is no need to install a driver.

The EM4102 transponder ID is sent to the PC as a keyboard entry so integration in all kind of software is easy.

To get more information, please visit www.transponder.de.